P

Q

R

N → MAX. C'SINK DIA.

L
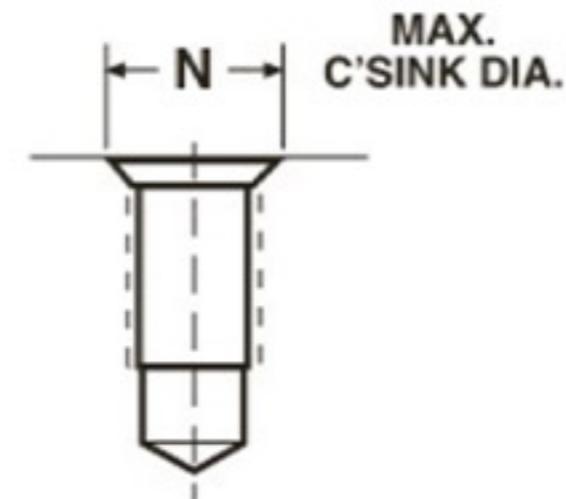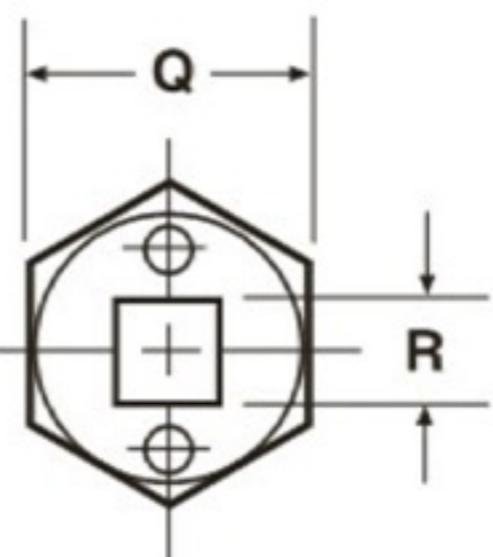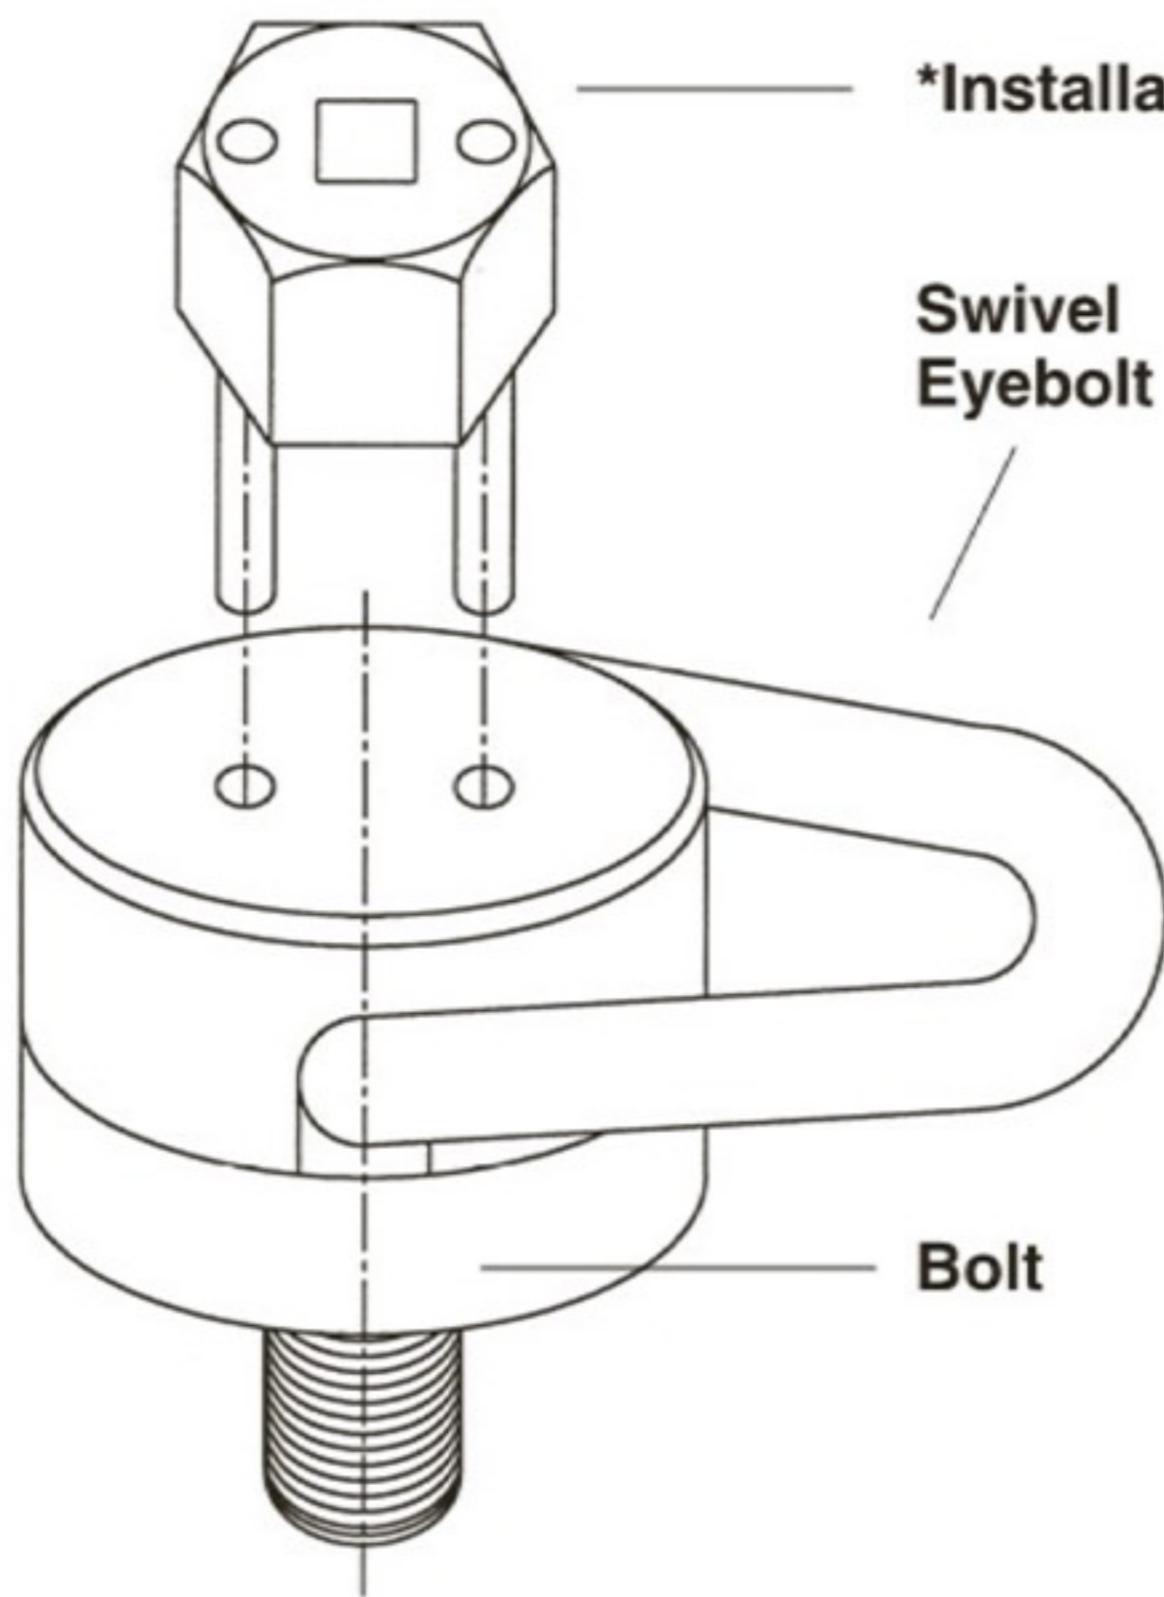
Installation Tool

TO PREVENT BINDING, THE MOUNTING HOLE COUNTERSINK SHOULD NOT EXCEED 'N' DIMENSION.

*Installation Tool

Swivel Eyebolt

Bolt

*Installation tool is required.